



Netcomm NF10W - Configuring into Bridge Mode

Obtain IP address of Modem likely 192.168.20.1


Browse to Modem by address and login using Username: admin password: admin

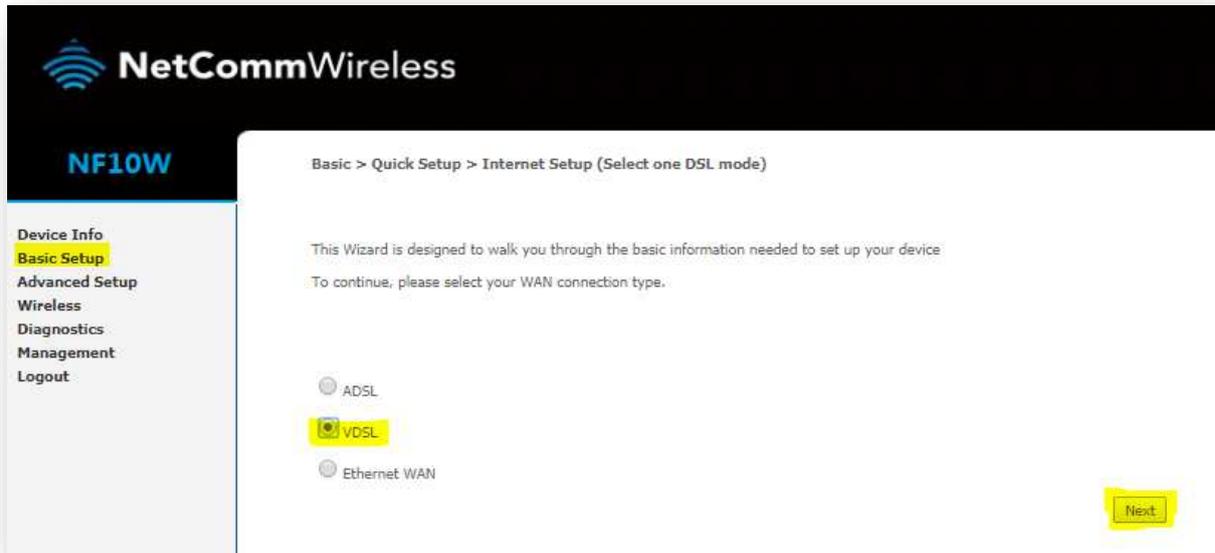

Select **Basic Setup** > **VDSL** > **Next**

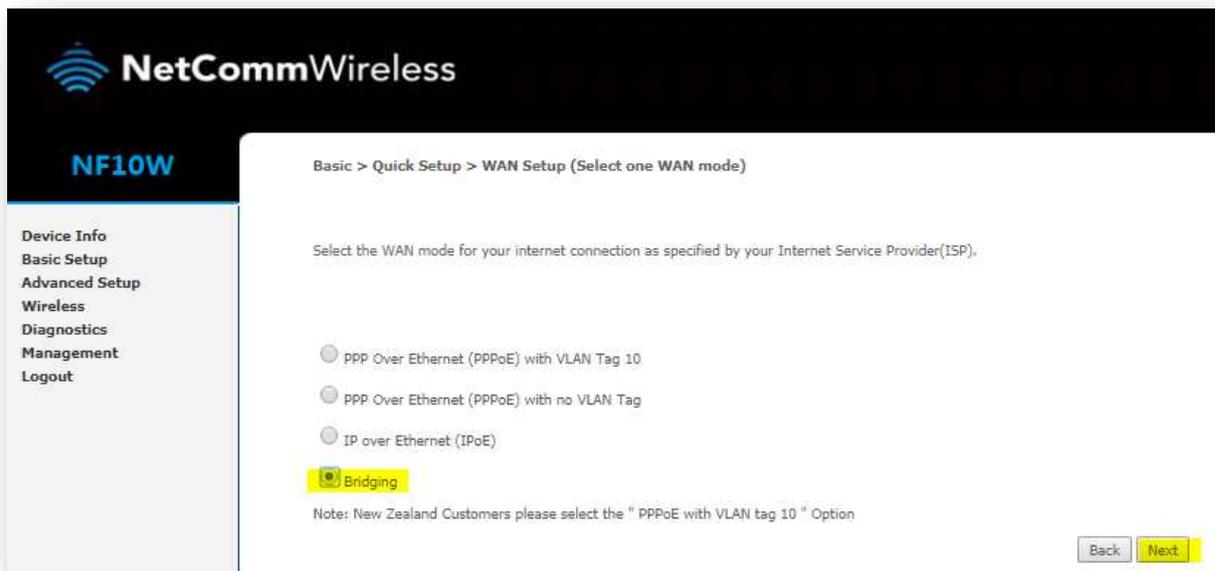


Select **Bridging** and click **Next**

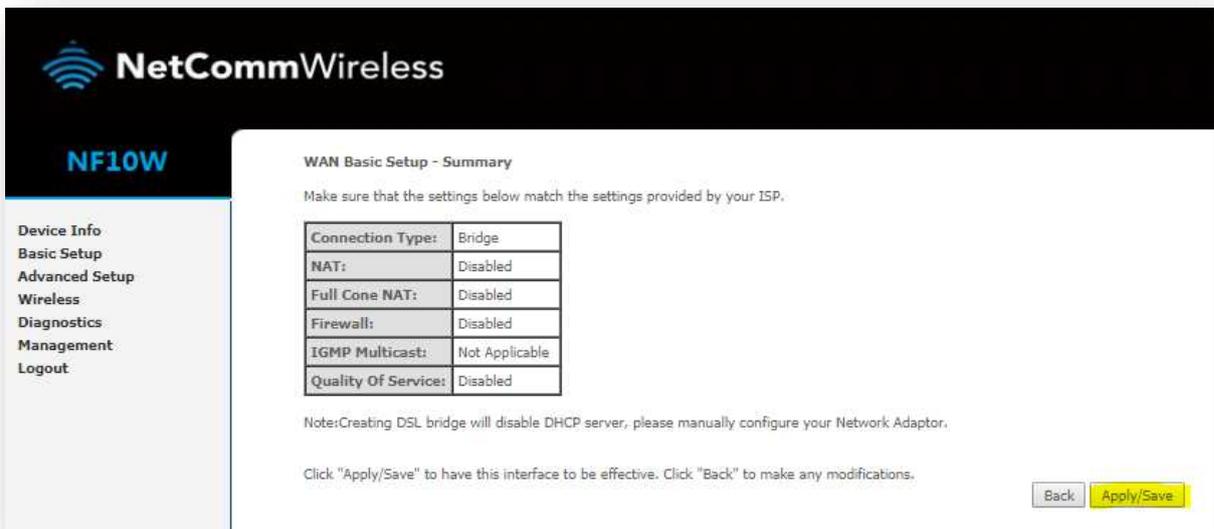

Select **Apply/Save**.

Once applied, Wireless will need to be disabled.

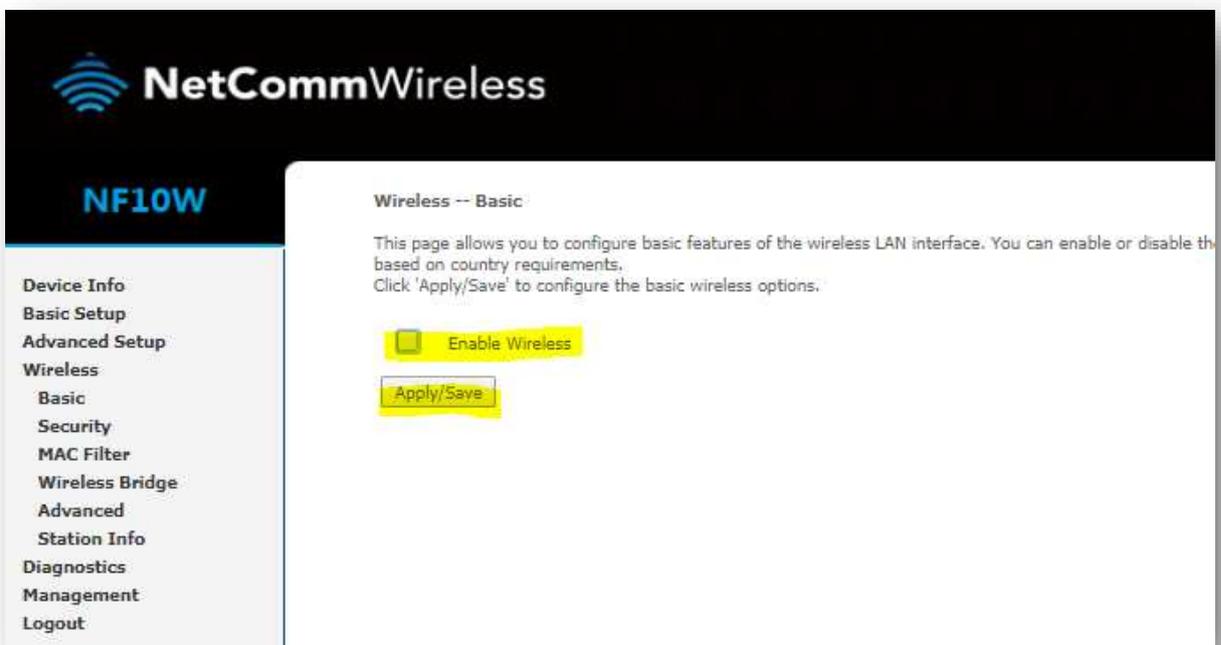


Click **wireless > Basic >** and **deselect Enable Wireless >** Click **Apply/Save**

Configuration Complete

NetComm NF10QW - Uploading Bridge Mode Configuration

Obtain IP address of Modem likely 192.168.20.1

Browse to Modem by address and login using Username: admin password: admin

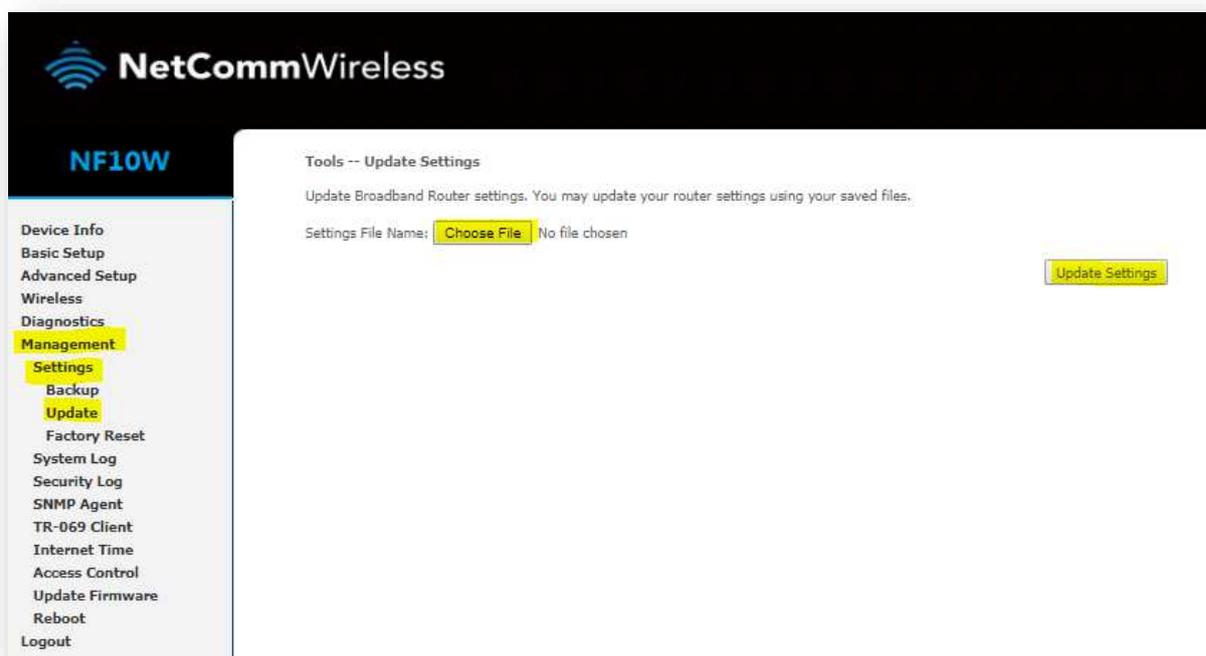

Once logged in Click **Management > Settings > Update**.

Click **Choose File** and browse to the downloaded config file.

Finally Select **Update Settings**.

Configuration Complete